


MEASUREMENT ILLUSTRATIONS

- STATIONARY PANEL LENGTH -

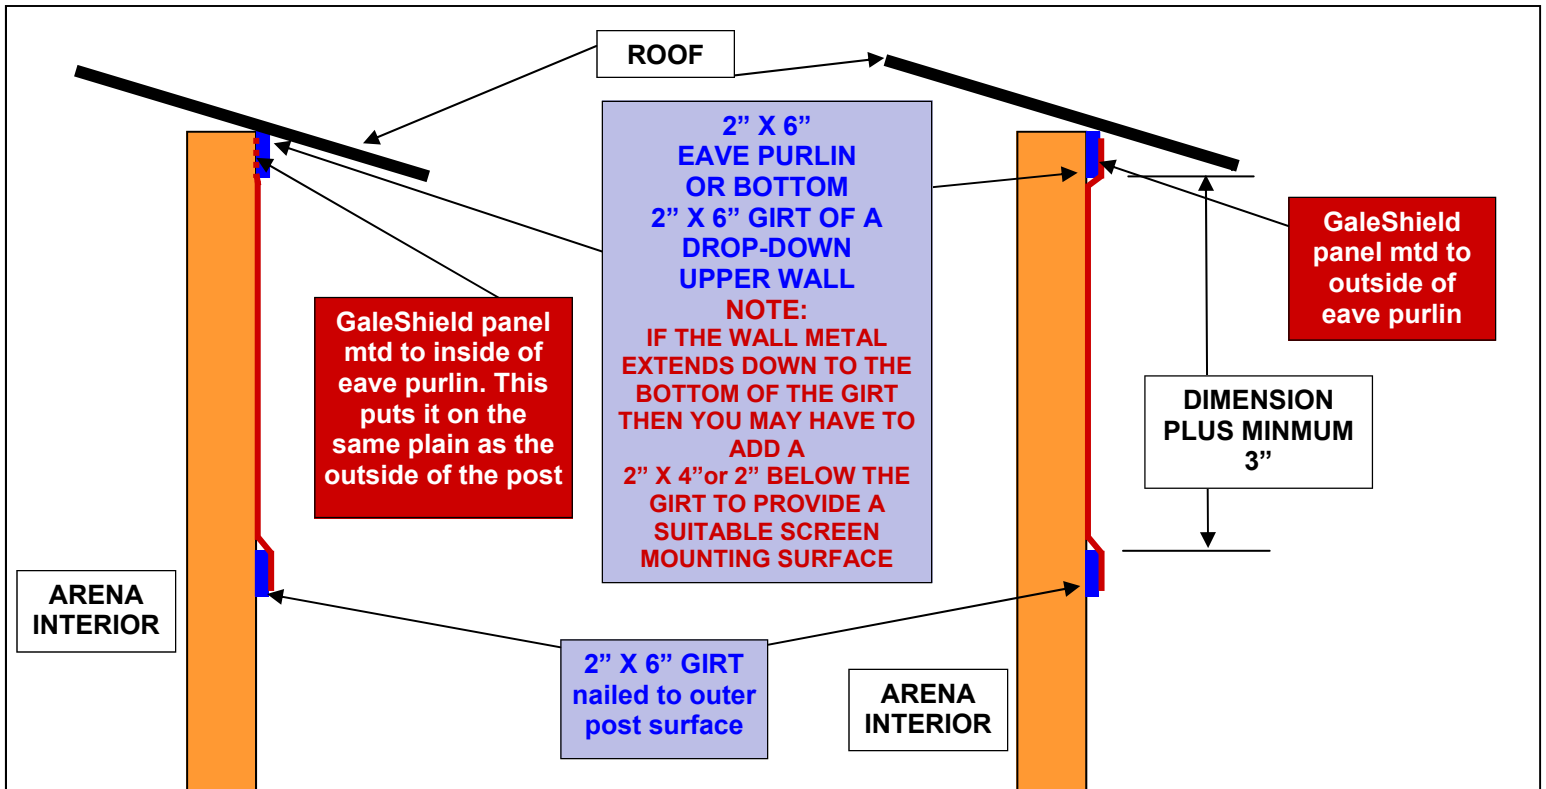

NOTE:

MEASURE FROM THE BOTTOM OF THE 2" X 6" EAVE PURLIN DOWN TO THE TOP OF WHATEVER HORIZONTAL SURFACE (FLAT GIRT, INSET GIRT OR TOP CAP) WHERE THE BOTTOM HEM WILL ATTACH. ALWAYS ADD MINIMUM 3" FROM THE ACTUAL HEIGHT MEASUREMENT TO ENSURE SIZE OF MOUNTING AREA THE SCREEN PANEL CAN BE ADJUSTED UP OR DOWN DURING THE INSTALLATION PROCESS FOR PROPER FIT

